

# Proper Lockbox Disposal

1. Do not throw boxes into the trash.
2. Remove batteries.
  - a. Open the lockbox key compartment using your SentiKey Mobile App.
  - b. Remove the battery cover using a Philips Head screwdriver.
  - c. Remove the two CR123A batteries from the lockbox.
3. Deliver lockbox and batteries to a solid waste facility in your community.

Culpeper: 540-825-8559

Fauquier: 540-422-8840

Madison: 540-948-3938

Rappahannock: 540-937-3337

